



BOUNCE HOUSE

OPERATING INSTRUCTIONS

1. Bounce House Rental includes: **Bounce House, blower, tarp and 2 stakes.**
2. If power source is more than 15' from Bounce House you will need a heavy duty extension cord at least 12-3 gauge and no longer than 100'. If this isn't possible you may need a generator.
3. Lay down tarp that is provided.
4. Unroll Bounce House; center of backside of the Bounce House is starting point. Blower tube should be showing when Bounce House is rolled up.
5. Attach blower to tube. Make sure tube is not twisted and is straight and with out bends when attached to blower.
6. Close vents at rear and side of Bounce House by closing zippers and Velcro over the zippers.
7. Attach blower to power source and turn on switch.
8. Bounce House will inflate in 5 minutes or less. **Check blower tube for twists and bends at this time again.** When fully inflated, Bounce House can more easily be moved into exact position for staking or adding weights.

CAUTIONS:

- 1. IF POWER IS INTERRUPTED FOR ANY REASON TO BLOWER, BOUNCE HOUSE WILL IMMEDIATELY DEFLATE!!**
- 2. MAKE SURE BOUNCE HOUSE IS THE ONLY ITEM USING POWER SOURCE.**
- 3. IF WINDS EXCEED 15 MPH IMMEDIATELY UNLOAD RIDERS AND DEFLATE.**