



INFLATABLE

OPERATING INSTRUCTIONS

1. Inflatable Rental includes: **Inflatable, blower, tarp, 5 stakes and 2 tie straps.**
2. If power source is more than 15' from Inflatable you will need a heavy duty extension cord at least 12-3 gauge and no longer than 100', if this isn't possible you may need a generator.
3. Lay down tarp that is provided.
4. Unroll Inflatable; center of backside of the Inflatable is starting point. Blower tube should be showing when Inflatable is rolled up.
5. Attach blower to tube. Make sure tube is not twisted and is straight and with out bends when attached to blower.
6. Close vents at rear and side of Inflatable by closing zippers and Velcro over the zippers.
7. Attach blower to power source and turn on switch.
8. Inflatable will inflate in 5 minutes or less. **Check blower tube for twists and bends at this time again.** When fully inflated, Inflatable can more easily be moved into exact position for staking or adding weights.

CAUTIONS:

1. **IF POWER IS INTERRUPTED FOR ANY REASON TO BLOWER, INFLATABLE WILL IMMEDIATELY DEFLATE!!**
2. **MAKE SURE INFLATABLE IS THE ONLY ITEM USING POWER SOURCE.**
3. **IF WINDS EXCEED 25 MPH IMMEDIATELY UNLOAD RIDERS AND DEFLATE.**