

PROJECTOR SCREEN

1) Remove screen from tripod



2) Set up tripod



3) Attach screen to tripod



4) Place screen handle on top of tripod in groove




5) Use handle for adjusting bottom of screen height



Close up photo of step 7

6) Adjust top of screen height here

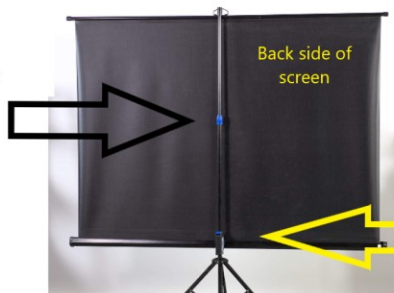

7) Adjust bottom of screen height here

TAKING DOWN PROJECTOR SCREEN

- 1) Lower screen by adjustment in step 6
- 2) Take screen handle in step 4 out of groove and let retract (gently) back down into screen case
- 3) Remove screen from tripod and place screen in carrying bag provided
- 4) Slide legs of tripod in and shorten the tripod pole so it will fit in carrying bag with screen