

TO OPEN:

FIRST TURN FEET OUT FOR STABILITY. THEY ARE LOCATED ON BOTTOM SIDE OF SCREEN CASE

UNLATCH AND OPEN LID

PULL UP ON LEVER IN CENTER OF SCREEN



TO CLOSE:

GO AROUND TO BACK SIDE OF THE SCREEN AND PUSH DOWN ON BACK SIDE OF THE LEVER THAT YOU USED TO PULL UP.



HOLD ONTO HANDLE WHEN LETTING DOWN SO IT GOES DOWN GENTLY.

MAKE SURE DIRECTIONS ARE PUT BACK IN CONTAINER

CLOSE LATCHES